


KBS

Przedłużki zaworów kulowych

Przedłużka teleskopowa do uruchamiania ze skrzynki ulicznej zaworu kulowego FRIALEN® KHP, KH, AKHP i AKHP-TL. W podanym zakresie (RD) możliwa płynna regulacja długości bez dodatkowych narzędzi, także już po zanastalowaniu. Samonośna niezależnie od ustawienia długości teleskopu. Odporna na korozję. Wersja z kluczem o rozmiarze 14 zaprojektowana specjalnie do przyłączydomowych.

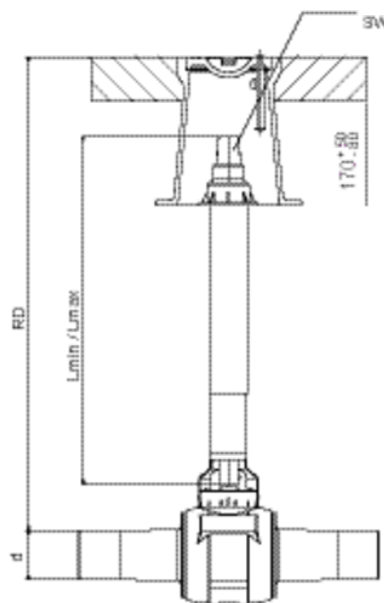

	Indeks	d	RD in m	Opak.	Paleta	l _{min}	l _{max}	SW	Masa kg/szt.
1	615741	20-50	0,45 - 0,7	1	42	398	543	30	2,000
1	615957	20-50	0,6 - 1,0	1	42	548	843	14	2,200
1	615328	20-50	0,6 - 1,0	1	42	490	785	30	2,000
1	616466	20-50	1,0 - 1,5	1	42	759	1303	14	2,850
1	615330	20-50	1,0 - 1,5	1	42	799	1343	30	3,600
1	616068	20-50	1,2 - 2,0	1	42	991	1785	14	3,650
1	615329	20-50	1,2 - 2,0	1	42	1049	1843	30	4,450
	615958	63-225	0,6 - 1,0	1	42	537	812	14	1,700
	615310	63-225	0,6 - 1,0	1	42	490	785	30	2,780
	616467	63-225	1,0 - 1,5	1	42	746	1272	14	5,050
	615331	63-225	1,0 - 1,5	1	42	786	1312	30	4,200
	616069	63-225	1,2 - 2,0	1	42	980	1754	14	3,450
	615311	63-225	1,2 - 2,0	1	42	1038	1812	30	4,950
	617586	20-50	0,62 - 0,79	1	42	520	350	30 + 14	2,000

¹ Solid fit of the pipe sleeve socket due to the covered housing design.

Key width SW₁ 14 mm for use as house connection fitting

KBS

Przedłużki zaworów kulowych

Other length on request.

For full-port passage ball valve KH d50 select version BS d63-225

KBS

Przedłużki zaworów kulowych

Areas of Application

Telescopic actuating linkage for operation of the FRIALEN KHP, KH, KHW, AKHP und AKHP-TL from the street cap.

Assembly Instructions

Before fusion, the FRIALEN KHP, KH, KHW, AKHP and AKHP-TL must be aligned to suit the type of actuation intended, in order to ensure that the installation kit BS will seat correctly.

Good reasons for using the FRIALEN-Installation kits BS:

Protective pipe of polyethylene protects from intrusion of sand or soil

Assembly without tools

Self supporting in any extended position

Safe from being pulled out

Corrosion proof

Telescope assembly set can be adjusted even once in place and filled

Constructive harmonizing of the transferable torque onto the FRIALEN-Ball Valve

Connection pins made from stainless steel

Coloured marking disk for use with gas and water

Parts of the protective pipe are fully welded together